

Table 5 Internal and External Call Ringing Tones

Tone No.	Frequency and Cadence
01	500 Hz 1 sec. On, 3 sec. Off, repeat
02	1300 Hz 1 sec. On, 1 sec. Off, repeat
11	500/640 Hz 1 sec. On, 3 sec. Off, repeat
12	500/640 Hz 1 sec. On, 1 sec. Off, repeat
13	860/1180 Hz 1 sec. On, 3 sec. Off, repeat
14	860/1180 Hz 1 sec. On, 1 sec. Off, repeat
15	1300/1780 Hz 1 sec. On, 3 sec. Off, repeat
16	1300/1780 Hz 1 sec. On, 1 sec. Off, repeat
17	860/1180 Hz 0.5 sec. On, 1300/1780 Hz 3 sec. Off, repeat
18	860/1180 Hz 0.5 sec. On, 1300/1780 Hz 1 sec. Off, repeat

Dial Pad and Button Beeps

Digital telephones can emit a “beep” whenever a dial pad or feature button is pressed. The “beeps” are On by default. Follow these steps to turn the “beeps” On or Off.

1. Press **☒(Hold)+3+6+9** (simultaneously).
2. Press **0**.
3. Press Programmable Feature Button 1 (FB1) to toggle On/Off.
 FB1, LED On: buttons beep.
 FB1, LED Off: buttons do not beep.
4. Press **☒(Hold)** to set the option.
5. You must also go off-hook, then on-hook to exit the program mode.

For Single Line Telephone

1. Press **☒(Hold)+3+6+9** (simultaneously).
2. Press **0 1**.
3. Press **☒(Msg)** to toggle On/Off.
 Msg LED On: buttons beep.
 Msg LED Off: buttons do not beep.
4. Press **☒(Hold)** to set the option.
5. You must also go off-hook, then on-hook to exit the program mode.